

NOTE: The Center Wedge Mounts between the Seats

Part # 7135 & 7145


- 1) Install horseshow bracket around the cross bar between the seats using the #10-32 Screws & Washers mount the Speaker Wedge into the inserts. (Fig.1)
- 2) After the brackets are installed the Wedge will rotate loosely around the bar. Position to the desired angle. (Fig. 2)
- 3) Once the wedge is positioned drill 13/64" Hole through the hole in the bracket into the Center Bar. (Fig. 3)
- 4) Using the self-taping 1/4"- 20 X 1 1/4"screws mount the wege into place. (Fig. 4)
- 4) Connect the 10' wire harness to the back of the Wedge
- 5) Run Wire harness to desired location.




(Fig. 1)



(Fig. 2)

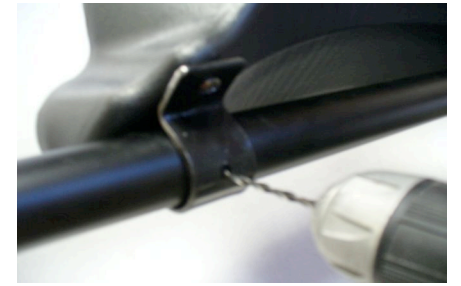

(Fig. 3)

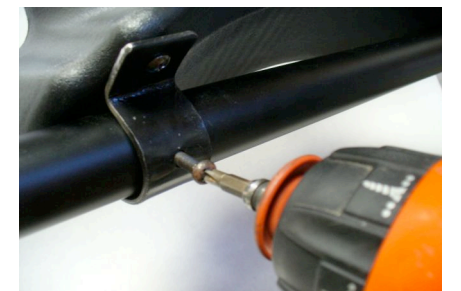

(Fig. 4)



Installed Front View



Installed Rear View

WIRING GUIDELINES

- 1) Connecting Speakers:
Splice wires from the Wedge into the left and right speaker wires under the dash
- | | |
|----------------------------|-------------------------------|
| Drivers Side - Left | Passenger Side - Right |
| Green / Red (+) | White /Red (+) |
| Green (-) | White (-) |

FOR 7145 with LED Light Show

NOTE: Not used for #7135 W/O LED Light Show

- 2) Connecting the Power for the LED Light Show
- LED Light Show**
Red (+) Attach to Battery or Fuse
Black (-) Attach to a good ground

RAZOR Brackets & Screws



Part #70XXB (For 1.5" Bar)

Vertically Driven Products
1401 Freeman Avenue
Long Beach, CA 90804
(562) 438-5112
info@vdpusa.com